# Inward opening furniture door

Interesting design solutions for small and large spaces

Technical data sheet

www.blum.com




# Product



- CLIP top BLUMOTION with integrated soft-close mechanism (can be deactivated)
- Suitable for the construction of cabinets with inward-opening doors
- For door widths up to 900 mm
- 3-dimensional front adjustment
- Convenient spiral-screw side adjustment
- Tool-free assembly and removal of the front
- With INSERTA tool free hinge to door assembly

Plain Stamped

- Boss drilling on the cabinet

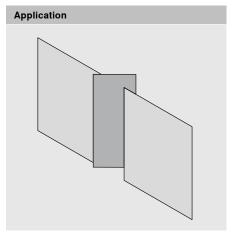

### **Ordering information**

Hinge with double cranked hinge arm				
Boss	INSER	INSERTA		
Hinge	Spring	Colour		
CLIP top BLUMOTION	•	NI   ONS	71B3790	
CLIP top	•	NI	71T3790	
Boss	Screw-	Screw-on		
Hinge	Spring	Colour		
CLIP top BLUMOTION	•	NI   ONS	71B3750	
CLIP top	•	NI	71T3750	
J Boss	Knock-	Knock-in		
Hinge	Spring	Colour		
CLIP top BLUMOTION	•	NI	71B3780	
CLIP top	•	NI	71T3780	
14/21				

• With spring

NI Nickel plated ONS Onyx black

Accessories						
•	Hinge boss co	ver cap				
Hinge	Colour					
CLIP top BLUMOTION	NI   ONS		70T3504			
CLIP top	NI		70T3504			
♥ ■ H	inge boss space	r				
Hinge	Spacing	(mm)				
CLIP top BLUMOTION	l 1.5		70T3507.21			
CLIP top	1.5		70T3507.21			
Chipboard screw						
Ø (mm)	Length (	(mm)				
3.5	15		609.1500			
3.5	17	17				
Insertion ram						
Colour	Material	Material				
Orange	Nylon	Nylon				
	Hinge arm cove	e arm cover cap				
Print/ stamp	Logo	Colour				

NI | ONS

NI


Blum

70.1663


70.1663.BP

# Planning

### Inward opening furniture door

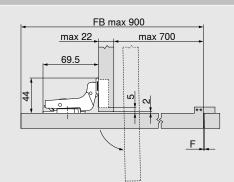

### Fixing position horizontal mounting plate with dimension 20/32

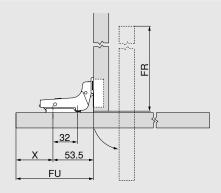


F

Hinge dimensions based on factory setting (mounting plate spacing = 0 mm)

- F Due to the size of the door, we recommend min 2 mm gap on all four sides.
- \*\* We recommend fitting a door stop to the side opposite the hinges when implementing an inward opening door (to be provided by furniture manufacturer). This ensures that the door cannot be misused and opened outwards.
- FB Front width

Fixing position cruciform mounting plate with dimension 37/32

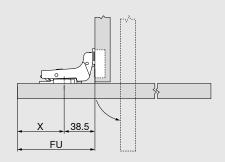

X = FU - 38.5

### X = FU - 53.5

FR = Front width - FU - 3


- FU Front protrusion
- FR Inward door projection


Gap

### Number of hinges


- Door weight up to 22 kg: 5 hinges
- Door weight up to 27 kg: 6 hinges
- Door weight up to 32 kg: 7 hinges


Application is tested with 80.000 opening and closing cycles



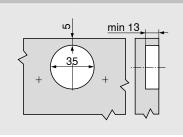

# INSERTA | knock-in

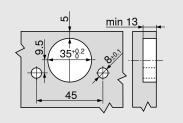




+ 2.0 mm - 3.0 mm





Adjustment

### Hinge boss dimensions




# ablum

# Product



- COMPACT with closing mechanism (spring)
- Suitable for the construction of cabinets with inward-opening doors
- One-piece hinge including mounting plate
- For door widths up to 800 mm
- Two-dimensional front adjustment

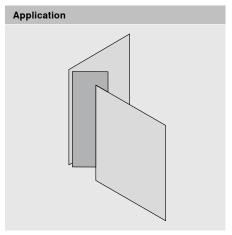

# **Ordering information**

Screw-on hinge				
	Screw-on			
Hinge	Spring	Colour		
COMPACT	•	NI	38B355AF22	
With spring	NI Nickel plated			

 Accessories
 Chipboard screw


 Ø (mm)
 Length (mm)

 3.5
 15


 3.5
 17

# Planning

# Inward opening furniture door

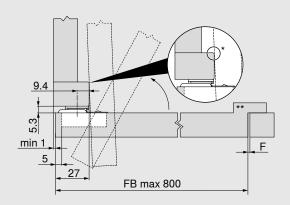

### Inward door projection

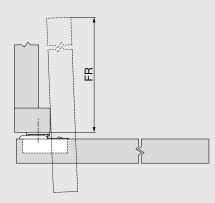

Hinge dimensions and gap calculation based on factory setting \* prevent collision

- F Due to the size of the door, we recommend min 2 mm gap on all four sides.
- A door stop must be fitted to the side opposite the hinges when \*\* implementing an inward opening door (installed by furniture manufacturer). This ensures that the door cannot be misused and opened outwards.
- FB Front width

FR = Front width - 48

FR Inward door projection

## Number of hinges


- Door weight up to 22 kg: 5 hinges
- Door weight up to 27 kg: 6 hinges
  Door weight up to 32 kg: 7 hinges

Application is tested with 80.000 opening and closing cycles


# Note

If COMPACT 38B is used in furniture that can be accessed or reached by small children, we recommend "Door opening inward with CLIP top BLUMOTION I CLIP top 110°".


### Screw-on assembly

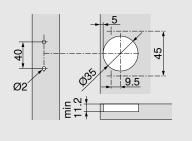

### Hinge boss dimensions

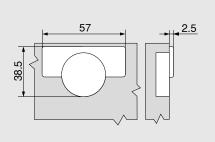

### Adjustment

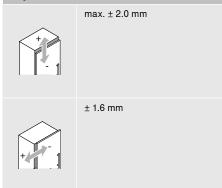



All content is copyrighted by Blum. Subject to technical modifications and changes to the range without notice. TD-147/3 EN-AL/06.24

Julius Blum GmbH 6973 Höchst, Austria Tel.: +43 5578 705-0 Fax: +43 5578 705-44 E-mail: info@blum.com www.blum.com

Our sites in Austria, Poland and China are certified to the international standards mentioned belo Our site in the USA is certified to ISO 9001. Our site in Brazil is certified to ISO 9001, ISO 14001 and ISO 45001.









